User's Manual

Rev. 2011A

Universal Mechanical Splice (No Tool)

A. Instruction for 900/900um or 900/250um Fibers

The Tool function is built-in. No additional tool is required for the procedure. You may set Fiber Checker to see the result immediately.

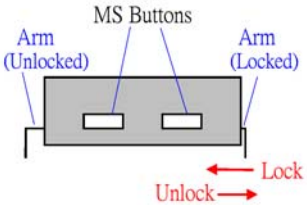	**< Drawing >** MS Buttons and arms.	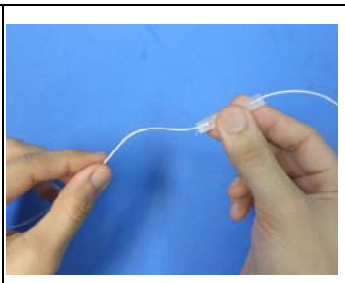	Step 5 Form a curve on the left fiber.
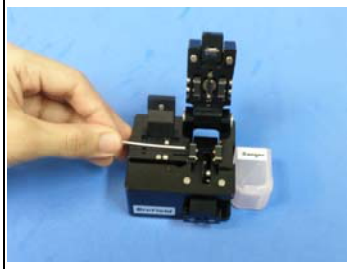	Step 1 After striping fiber by stripper, please cleave the fiber as the length of **12.5mm (0.5 inch)**.	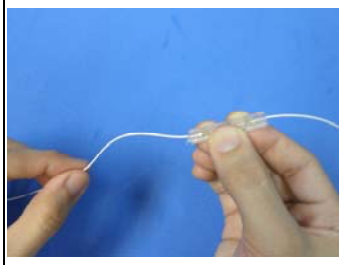	Step 6 Press both MS buttons completely during the left fiber is curving for connecting fibers.
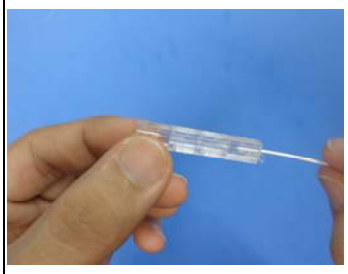	Step 2 Insert 900um fiber to right side of Mechanical Splice and push the fiber to the end.	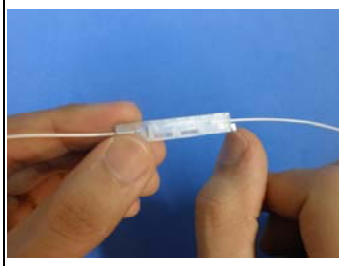	Step 7 Unlock the right arm.
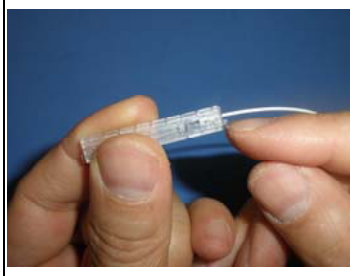	Step 3 Lock the right arm to fix 900um fiber.		Step 8 Now the job is done.
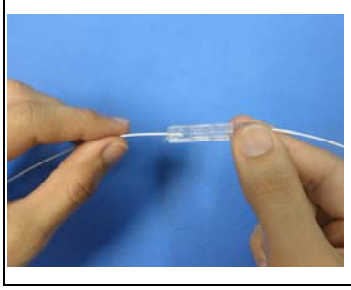	Step 4 Repeat step 1 for another fiber. Insert **250 or 900um** fiber to left side of Mechanical Splice and push the fiber to the end.		

User's Manual

Rev. 2011A

Universal Mechanical Splice (No Tool)

B. Release Methods

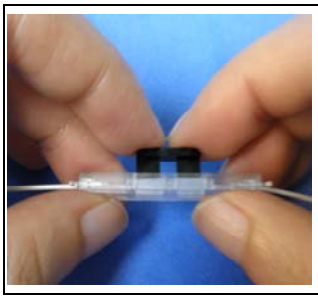	Use BroField **Release Key** to push MS buttons up. (The Key is free to customers.)

C. Contact Information

If you have any question for our products, please contact us. You can also find the "Training Video" on our web.

BroField Technology Inc.
NO, 6, LN 40, SEC 1. CHU-MEI RD, CHUTUNG,
HSINCHU, 310 TAIWAN
E-mail: info@brofield.com
Web: www.brofield.com

TEL +886-3-5833517
FAX +886-3-5827018